



**2000AMP
POWER STATION
&
VEHICLE JUMP STARTER
INSTRUCTION MANUAL
P/N 030-2040-WH**



**Read this material before using this product.
Failure to do so can result in serious injury.
Save this manual.**

CONTENTS

Important Safety Instructions & Warnings 3

Product Specifications..... 6

Product Overview..... 6

Operating Instructions 7

LCD Screen Display..... 8

Smart Alligator Clip Function/Errors..... 10

Charging the Power Station & Vehicle Jump Starter..... 11

User Maintenance Instructions..... 12

Trouble Shooting 12

Regulatory Warnings..... 13

Customer Service..... 14

Warranty..... 14

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using this product, basic precautions should always be followed. Including the following:

1. Save these instructions.
2. Read all the instructions before using the product.
3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not put fingers or hands into the product.
5. Use of an attachment not recommended or sold by the **Power Station & Vehicle Jump Starter** manufacture may result in a risk of fire, electric shock, or injury to person.
6. To reduce the risk of damage to the electric plug, pull on the plug rather than the cords when disconnecting the **Power Station & Vehicle Jump Starter**.
7. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
8. Do not operate the power pack with a damaged cord or plug.
9. Do not disassemble the **Power Station & Vehicle Jump Starter**, only a qualified service technician should service the product. Incorrect reassembly may result in a risk of fire or electric shock.
10. To reduce the risk of electric shock, unplug the power pack from the outlet before attempting any instructed servicing.

WARNING

RISK OF EXPLOSIVE GASES

1. WORKING IN THE VICINITY OF A LEAD ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS THE UTMOST IMPORTANCE THAT YOU FOLLOW THE INSTRUCTIONS EACH TIME YOU USE THIS ITEM.
2. To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacturer and manufacturer of any equipment you intend to use in the vicinity of the battery. Review all cautionary marking on these products and on engine.

PERSONNEL PRECAUTIONS

1. Consider having someone close enough by to come to your aid when working near lead-acid battery.
2. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
3. Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
4. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with cold water for at least 10 minutes and get medical attention.
5. NEVER smoke or allow a spark or flame in vicinity of battery or engine.
6. Be extra cautious to reduce the risk of dropping a metal tool onto the battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
7. Remove personnel metal items such as rings, bracelets, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing severe burn.

WARNING

1. When charging the internal battery, work in a well-ventilated area and do not restrict ventilation in any way.
2. Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burn.
3. Do not expose **Power Station & Vehicle Jump Starter** to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
4. Have servicing performed by a qualified technician using only factory replacement parts.

CAUTION

- 1) Do not immerse in water.
- 2) Do not use or store the **Power Station & Vehicle Jump Starter** near sources of fire or heater.
- 3) Do not put the **Power Station & Vehicle Jump Starter** into a fire or apply direct heat to it.
- 4) Do not pierce the **Power Station & Vehicle Jump Starter** casing.
- 5) Do not strike, throw, or subject the **Power Station & Vehicle Jump Starter** to severe physical shock.
- 6) Do not attempt to modify the **Power Station & Vehicle Jump Starter** in any way.
- 7) Do not place the **Power Station & Vehicle Jump Starter** in a microwave oven or pressurized container.
- 8) Do not use the **Power Station & Vehicle Jump Starter** if it gives off an odor or generates heat
- 9) Do not insert any metal object into the cable input opening as this could cause a spark and electric shock.

PRODUCT SPECIFICATIONS

Power Station & Vehicle Jump Starter

Standard USB Output port	5VDC, 2.4Amp
Type – C USB, In (Out) port	5VDC, 3Amp
QC 3.0 Output port	5V/9V/12V
DC Output	12VDC/10A
AC Output	110VAC/60Hz/100W
Start Current/Peak Current	1000Amp/2000Amp
Model Part Number	030-2040-WH
Operating Temperature	32°F -104°F (0°C – 40°C)
Warranty	1 year
Certification	CEC, DOE, FCC, ICES-001
Transportation	UN38.3


PRODUCT OVERVIEW

Below is a list of items that should be included in your retail box:


- 1) Power Station & Vehicle Jump Starter
- 2) USB Charging Cable
- 3) Smart Alligator Clips
- 4) USB Wall Charger
- 5) Female Cigarette Cable
- 6) Carry Bag
- 7) Instruction Manual

OPERATING INSTRUCTIONS

Power Station & Vehicle Jump Starter Features

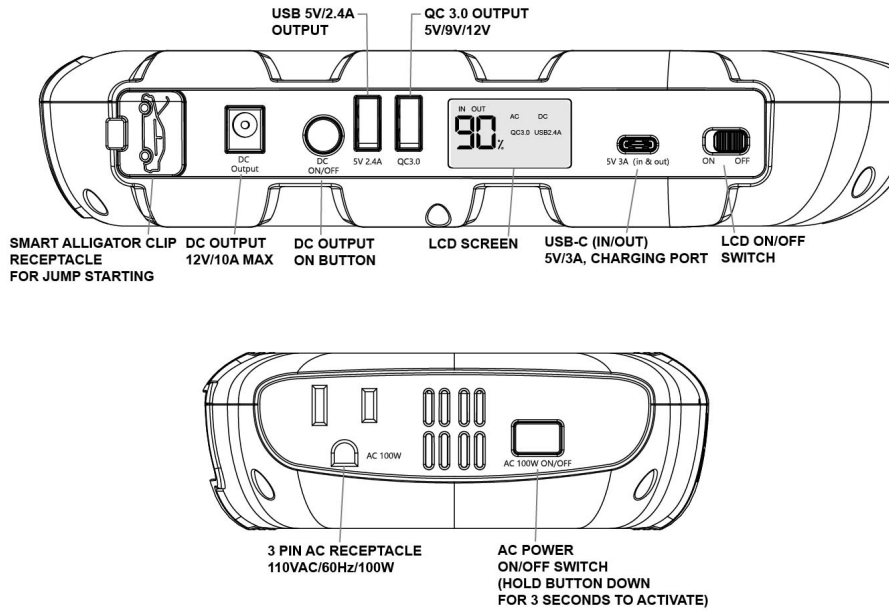

LCD SCREEN DISPLAY

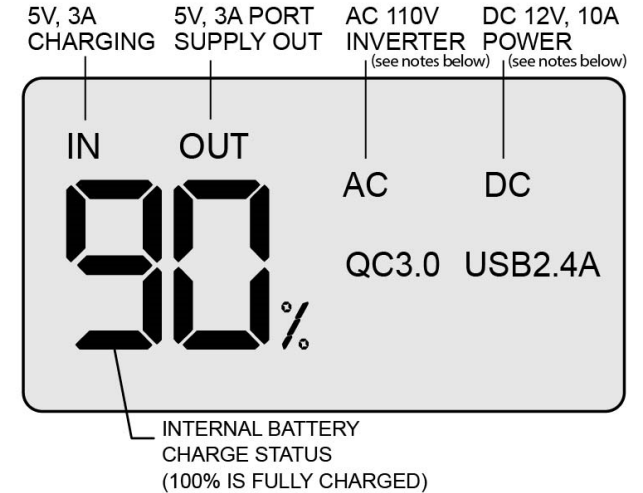

WHICH EVER FEATURE OF THE POWER STATION IS BEING USED THE CORRESPONDING DESCRIPTION WILL APPEAR ON THE LCD SCREEN.

WARNING:
IF THE "AC" OR "DC" IS FLASHING AND THE ELECTRICAL DEVICE YOU HAVE PLUGGED IN IS NOT WORKING, THAT MEANS THE CURRENT BEING DRAWN IS OVER THE MAXIMUM RATED WATTAGE OR AMPERAGE FOR THAT OUTPUT. CHECK THE ELECTRICAL RATINGS OF THE DEVICE.

AC OUTPUT: 110VAC/60Hz/100W MAX

DC OUTPUT: 12VDC/10A MAX

NOTE:

The DC icon on the LCD will not light up until the output exceeds 350mA, and will extinguish when the output is lower than 150mA.

Also the DC port will shut down when the output is lower than 120mA.

JUMP STARTING A VEHICLE

- 1) Before jump starting your vehicle always check the manufacturer instructions/recommendations/warnings first.
- 2) Check the battery level of the **Power Station & Vehicle Jump Starter** by moving the ON/OFF switch to “ON” before jump starting your vehicle. **There must be at least 50% of battery level available.**
- 3) Insert the smart alligator clip connector into the connector behind the “Engine Start” cover.
- 4) Connect the RED positive clip to the positive post on the battery, then the BLACK negative clip to the negative post on the battery.
- 5) **CAUTION:** Ensure the Power Station & Vehicle Jump Starter and smart alligator clip cables are clear of all vehicle fan blades/belts/pulleys etc. before proceeding.
- 6) The LED on the smart alligator clips will turn from flashing Green to solid GREEN. Wait 5 to 10 seconds then start your vehicle
- 7) Remove the clips **IMMEDIATELY** after the vehicle has started. Black negative clamp first.
- 8) DO NOT use the Vehicle Jump Starter to repeatedly try and start your vehicle. Wait at least thirty (30) seconds between attempts. Check vehicle after three attempts.

SMART ALLIGATOR CLIPS FUNCTION/ERRORS



The smart alligator clips contain a **Green** and **Amber** LED along with a warning buzzer for Faults and Error protection:

- 1) If correctly connected to the battery the LED on the smart alligator clips should go from flashing **Green** to solid **Green**.
- 2) Standby Mode – Clips are not connected, or bad connection – The **Green** LED Flashes.
- 3) If the lithium battery pack of the jump starter is lower than 14V, the **Amber** LED will light up solid and buzzer beeps slowly.
- 4) If lithium battery pack of the jump pack is higher than 17.5V, the **Amber** LED will light up solid and buzzer on solid. (Smart clips plugged into incorrect voltage jump pack)
- 5) Alligator clips connected to vehicle battery in reverse polarity. (Red clip to Black negative terminal, Black clip to Red positive terminal). **Amber** LED lights up solid and buzzer beeps rapidly.
- 6) Short circuit protection -, **Amber** LED lights up solid and buzzer beeps rapidly
- 7) Overheat protection -, **Amber** LED flashes. Buzzer beeps slowly.

CHARGING POWER STATION & VEHICLE JUMP STARTER

- 1) Use the supplied USB cable to charge the Power Station & Vehicle Jump Starter. **NOTE:** While charging all the other features and functions are NOT active.
- 2) When charging "IN" will appear above the percentage of charge digits and the second percentage digit will flash on the LCD display.
- 3) Once the internal battery level has reached 100% the charge is complete, and the unit will turn off after 10 seconds.
- 4) The battery level should be checked and charged every three (3) months.
- 5) When charging the internal battery, work in a well-ventilated area and do not restrict ventilation in any way.

CAUTION

- 1) The device shall be stored indoors and protected from the elements.
- 2) The unit shall not be charged outdoors.
- 3) When in use, steps should be taken to reduce the exposure to rain, sleet, snow, and the like.

USB PORTS

There are three (3) USB ports contained in your Power Station & Vehicle Jump Pack.

- 1) Standard USB Output port - 5VDC/2.4Amp. Used to charge your cell phone, tablet etc.
- 2) Type – C USB, (In Out) port – 5VDC/3Amp. (Out) This can power a tablet, power pack, smart phone, camera etc. (In) Charge the internal battery contained inside the Power Station & Jump Starter.
- 3) QC 3.0, 5V/9V12V Quick Charging.

USER MAINTENANCE INSTRUCTIONS

- 1) The battery level should be checked, and the Power Station & Vehicle Jump Starter should be charged every three (3) months. Keeping the internal battery fully charged will ensure the Power Station & Vehicle Jump Starter in ready to use when needed. This will also extend the life of the internal battery.
- 2) Store the Power Station & Vehicle Jump Starter in a clean dry environment at room temperature if possible.
- 3) If you see a bulge in the case or notice a chemical smell STOP using the Power Station & Vehicle Jump Starter immediately and seek technical help.

TROUBLE SHOOTING

PROBLEM	SOLUTION
The vehicle will not start	Check the connection of the alligator clips to the battery terminals and ensure the LED is solid green and not flashing on the smart alligator clips. Ensure you have a minimum of 50% showing on the LCD screen.
Power Station & Vehicle Jump Starter will not charge	Check the cable and connection and try charging a different device.

FCC WARNING

Title 47 Subpart, 15.105(b)

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-001: Industrial, Scientific, and Medical (ISM) Radio Frequency Generators

This product has been tested with the listed standards and found to be compliant with the Code of Industry Canada ES-001 and the measurement Procedure according to CISPR 11.

CAN ICES-001(B) / NMB-001(B)

CUSTOMER SERVICE

For customer support please visit batterytender.com. You can also call our customer service hotline 877-456-7901

WARRANTY

The Battery Tender® Power Station & Vehicle Jump Starter comes with a twelve (12) month limited warranty against defects or failure (within one (1) year of purchase).

THIS LIMITED WARRANTY IS VOID under the following conditions:

- 1) The product is misused, subjected to careless handling, or operated under conditions of extreme temperature, shock, or vibration beyond our recommendations for safe and effective use.
- 2) The product is disassembled or repaired by anyone who is not an authorized service representative of Battery Tender®
- 3) The product was purchased from an unauthorized source. Warranty is not transferable from the original purchaser.
- 4) Any physical damage to any of components or any accessory after purchase.
- 5) Any modifications to any of the components.
- 6) Any corrosion including salt water.