



**5-WATT 12 VOLT SOLAR PANEL
BATTERY CHARGER INSTRUCTION MANUAL
P/N 021-1171 & P/N 021-1172**



**Read this material before using this product.
Failure to do so can result in serious injury.
Save this manual.**

CONTENTS

Important Safety Instruction & Warnings.....	3
Product Specifications.....	8
Product Overview.....	8
Solar Panel Operation and Installation.....	9
Trouble Shooting.....	14
Customer Service.....	15
Warranty.....	15

IMPORTANT SAFETY INSTRUCTIONS & WARNINGS

SAVE THESE INSTRUCTIONS: This manual contains important safety and operating instructions for the Battery Tender® Solar Panel battery charger.

CAREFULLY READ THESE INSTRUCTIONS BEFORE USING THE BATTERY CHARGER.

WARNING AND CAUTION LABEL DEFINITIONS:

WARNING

WARNING indicates a potentially hazardous situation, which, if not avoided, could result in serious injury or death.

CAUTION

CAUTION indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation that if not avoided, may result in property damage.

GENERAL PRECAUTIONS

WARNING

Battery posts, terminals and related accessories contain lead and lead components, and other chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Always wash your hands after handling these devices.

WARNING

Do not operate the battery charger with damaged DC output cords or accessories - Replace Cords or accessories immediately if damaged.

CAUTION

WORKING WITH LEAD ACID BATTERIES AND BATTERY CHARGERS: All lead acid batteries have the potential to emit gases that may combine into a combustible or explosive mixture. In many cases, it is possible that lead acid batteries will emit these gases during normal discharge and charging operations. Because of this potential danger, it is important that you follow the precautions recommended by both the battery and battery charger manufacturers before using either one. For example, do not exceed the recommended maximum recharge rate (charger output current limit), or remove cell caps while charging flooded batteries.

CAUTION

CHARGER VOLTAGE COMPATIBILITY: NEVER use a battery charger unless the battery voltage matches the output voltage rating of the charger. For example, do not use a 12-volt charger with a 6-volt battery and vice-versa.

CHARGER LOCATION: LOCATE the charger as far away from the battery as is allowed by the length of the output cable harness.

EXCESSIVE MOISTURE: Do not submerge the Solar Panel in any liquid.

CHARGER ATTACHMENTS: Do not use attachments that are not recommended or sold by the charger manufacturer. To do otherwise may result in the risk of electric shock, fire, or possibly some other unforeseen potential personal injury situations.

MONITORING SEALED & NON-SEALED BATTERIES: When leaving a battery charger connected to either a sealed (AGM or GEL) or non-sealed (flooded battery) for extended periods of time (weeks, months, etc.), periodically check the battery to see if it is unusually warm. This is an indication that the battery may have a weak cell and that it could go into a thermal runaway condition. If the battery releases an excessive amount of gas or if the battery gets hotter than 130°F (55°C) during charging, disconnect the charger and allow the battery to cool. Overheating may result in plate distortion, internal shorting, drying out or other damage. For flooded batteries, also check individual cell fluid levels against manufacturer's recommendations for safe operation.

WARNING

ELECTRIC SPARK & OPEN FLAME: NEVER smoke or allow a source of electric spark or open flame in the vicinity of the battery or engine. (For example: Don't charge the battery next to a gas water heater.)

VENTILATION: Do not operate the charger where ventilation is restricted. The intent here is to allow sufficient airflow to minimize and dissipate the heat generated by the charger and to diffuse the gasses that may be emitted by the battery.

CHARGER MAINTENANCE: NEVER DISASSEMBLE OR ATTEMPT TO DO INTERNAL REPAIRS. THIS VOIDS THE WARRANTY. Assembling the charger incorrectly may result in the risk of electric shock or create a fire hazard.

PERSONAL PRECAUTIONS

WARNING

WHEN YOU WORK NEAR LEAD-ACID BATTERIES:

1. Someone should be within range of your voice or close enough to come to your aid if you have an accident.
2. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
3. Wear complete eye protection and protective clothing. Avoid touching your eyes while working near a battery. If battery acid contacts your skin or clothing, wash immediately with soap and water. If acid enters an eye, immediately flood the eye with running cold water for at least 10 minutes and get medical attention as soon as possible.
4. Be extra cautious when handling metal tools around a battery. If you drop a metal tool near a battery it might spark or create a short circuit between the battery terminals and some other metal part. Either event may cause a dangerous electrical shock hazard, a fire, or even an explosion.
5. Remove all personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuited current high enough to weld a metal ring or other piece of jewelry, causing a severe burn.

6. **Use Battery Tender® Solar Chargers for charging 12V lead-acid or 12V Lithium-Ion batteries only.** They are not intended to supply power to an extra low-voltage electrical system or to charge dry-cell batteries. Charging dry-cell batteries may cause them to burst and cause injury to persons and damage to property.

INFORMATION NOTE ABOUT DRY-CELL BATTERIES:

There are some wet, non-spillable, lead acid batteries on the market whose manufacturers claim that they are dry-cell batteries. These batteries are sealed, gas-recombinant, starved electrolyte, possibly with AGM (Absorbed Glass Mat) type construction. It is perfectly safe to use the Battery Tender® Solar Charger to charge these types of batteries. The dry-cell battery warning is intended for rechargeable or non-rechargeable alkaline and other similar types of batteries. If you have any doubt about the type of battery that you have, please contact the battery manufacturer before attempting to charge the battery.

7. **NEVER** charge a visibly damaged or frozen battery.

WARNING

IF THE BATTERY MUST BE REMOVED FROM THE VEHICLE:

1. To avoid an electric arc (or spark), turn off or disconnect all of the accessories in the vehicle. Then always remove the cable that is connected to grounded terminal from battery first.
2. If necessary, clean the battery terminals. Be careful to keep the corrosion and other debris from coming in contact with your eyes.
3. If the battery is not a sealed battery, then, if necessary, add distilled water to each cell until the battery acid solution reaches the level specified by battery manufacturer. Do not overfill.
4. Before connecting the charger to the solar panel, check the polarity of the battery posts, and attach at least a 24 inch long 6 (AWG) insulated, battery extension cable to the negative battery post. Then connect the appropriate charger DC output connectors to the battery and the extension cable, positive to positive and negative to negative. Never allow the alligator clips or terminal rings to touch each other after they are connected to the battery charger.

WARNING

IF THE BATTERY REMAINS INSTALLED IN THE VEHICLE:

1. DO NOT CONNECT THE CHARGER'S OUTPUT LEADS TO THE SOLAR PANEL UNTIL ALL OTHER CONNECTIONS ARE MADE!
2. Place and OUTPUT DC power cords in the best position to avoid accidental damage by movable vehicle parts, i.e., hoods, doors, or moving engine parts (fan blades, belts, or pulleys).
3. Check the polarity of the battery posts. If the positive (pos, p, +) post is connected to the vehicle chassis, then the vehicle has a positive ground system. If the negative (neg, n, -) post is connected to the vehicle chassis, then the vehicle has a negative ground system. Negative ground systems are the most common.
4. For negative ground systems, connect the positive (red) alligator clip, or ring terminal to the positive battery post. Then connect the negative (black) alligator clip, or ring terminal to the vehicle chassis. Do not make the negative charger clip or ring connection to the carburetor, fuel lines, or thin, sheet metal parts. Make that connection to the engine block or a heavy gauge metal part of the frame.
5. For positive ground systems, connect the negative (black) alligator clip, or ring terminal to the negative battery post. Then connect the positive (red) alligator clip, or ring terminal to the vehicle chassis. Do not make the positive charger clip or ring connection to the carburetor, fuel lines, or thin, sheet metal parts. Make that connection to the engine block or a heavy gauge metal part of the frame.

PRODUCT SPECIFICATIONS

SOLAR CONTROLLER	
Input	Sunlight
Output	13.1VDC, 325mA (5Watt)
Part Number	021-1171 & 021-1172
Working Temperature	-49 to 185°F (- 45 to 85°C)
Warranty	5 years
Certification	IP67 Rated

PRODUCT OVERVIEW

Below is a list of items that should be included in your retail box for P/N 021-1171:


- 1) 1 - Solar Panel
- 2) 4 - Suction Cups
- 3) 4 - 5mm Hex Nuts
- 4) 1 - Male Cigarette Adapter with 18" cord
- 5) 1 - Instruction Manual

Below is a list of items that should be included in your retail box for P/N 021-1172:


- 1) 1 - Solar Panel
- 2) 4 - Suction Cups
- 3) 4 - 5mm Hex Nuts
- 4) 1 - Ring Terminal Harness
- 5) 1 - OBD II Harness
- 6) 1 - Handlebar Bracket
- 7) 1 - Instruction Manual

SOLAR PANEL ASSEMBLY/OPERATION AND INSTALLATION


SOLAR PANEL INSTALLATION/CONNECTIONS FOR P/N 021-1171

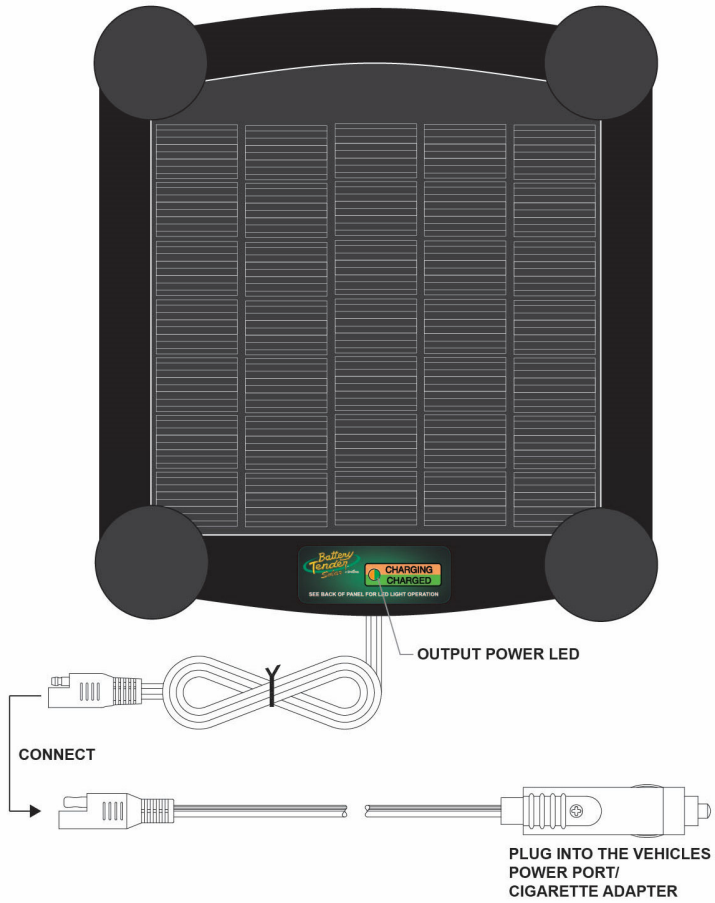

SOLAR PANEL INSTALLATION/CONNECTIONS FOR P/N 021-1172

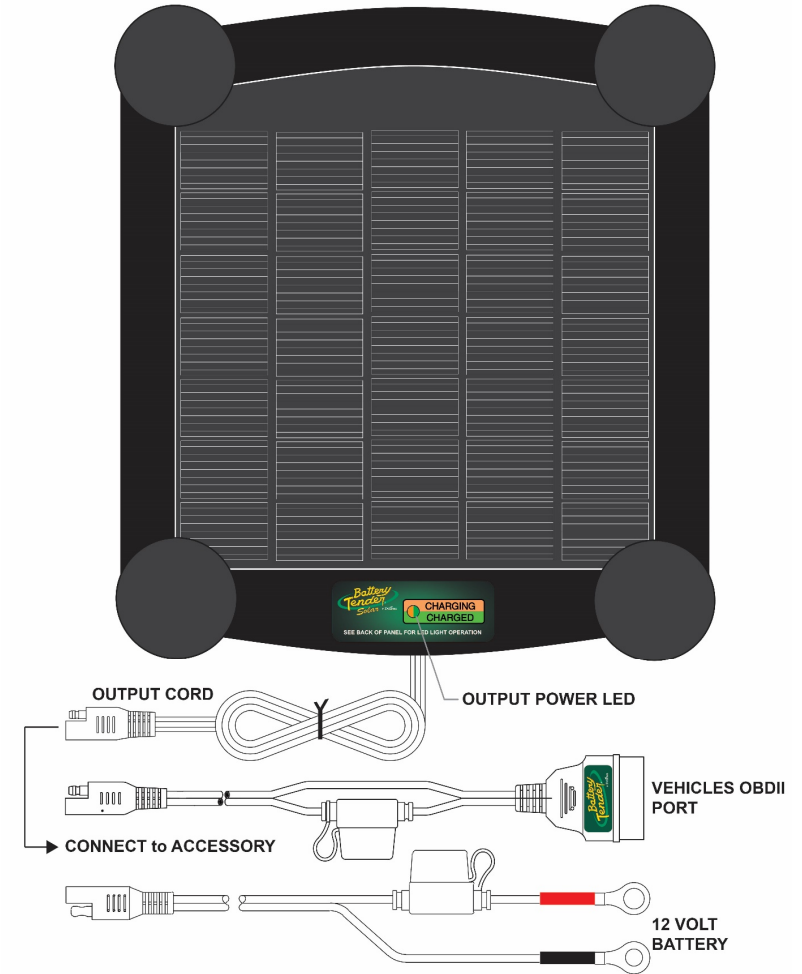

SOLAR PANEL SUCTION CUP INSTALLATION

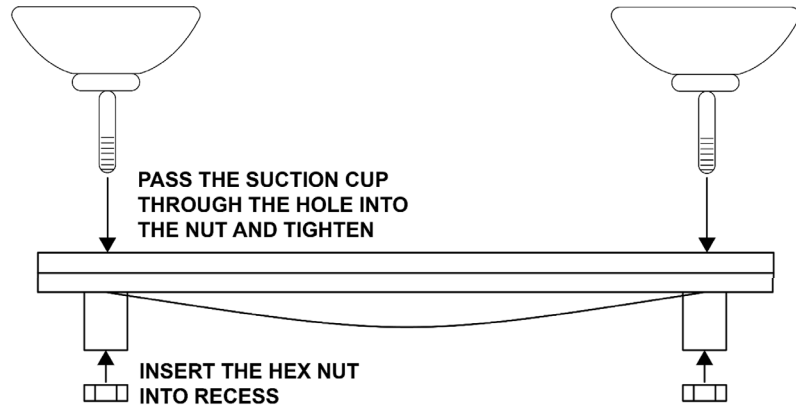

Note:

The suction cups can be installed on either side of the solar panel depending on how you wish to use and install the panel.

The solar panel can be used inside or outside the vehicle.

Position the solar panel so that it receives the most hours of sunlight during the day. Ensure the inside of the windshield or window is clean and clear and there are no obstructions blocking the solar panel.

SOLAR PANEL LED INDICATOR OPERATION



The following describes the LED indicator light operation.

LED State	Solar Panel/Controller Status
LED Off	Insufficient power from solar panel (No sunlight)
LED Flashing Green/Amber	<u>RPP Mode:</u> Polarity on battery connection reversed
LED Flashing Amber	<u>Standby Mode:</u> Solar panel/charger is ready to charge a battery and no battery is detected, or bad connection.
LED Steady Amber	<u>Charging Mode:</u> Battery is charging
LED Steady Green	<u>Charged Mode:</u> Battery is charged

WARNING: THE VEHICLES POWER PORT/CIGARETTE ADAPTER MUST REMAIN ON (HOT) ONCE THE VEHICLES IGNITION HAS BEEN TURNED OFF IN ORDER FOR THE BATTERY TO CHARGE. CHECK THE VEHICLES OWNERS' MANUAL FOR THIS INFORMATION

ADDITIONAL CHARGER INFORMATION

AUTOMATIC CHARGING AND BATTERY STATUS MONITORING: The Battery Tender® Solar Charger is completely automatic and may be left connected to both the solar panel and to the battery that it is charging for long periods of time. However, it is prudent to periodically check both the battery and the charger for normal operation during these extended charging periods.

The charger output power, voltage, and current all depend on the condition of the battery that is being charged and the available input power from the solar panel. Battery Tender® Solar Panels have a status light that indicates the operating mode of the charger.

The Battery Tender® Solar Charge Panel charges up to 325mA (0.325 Amp-Hour per hour). Therefore, a fully discharged 20 Amp-Hour battery will take approximately 48 hours to recharge to 80% capacity. Some large automotive or marine, deep cycle type batteries may take several days to fully recharge. Please note this condition assumes full sunlight and optimal tilt angle.

SPECIAL FEATURES: The **Battery Tender**® Solar Panel has the following special features:

BATTERY BACK FEED PROTECTION: The Solar panel has a special circuit that prevents your battery from back charging into the Solar panel and draining your battery.

WORKING WITH A DEAD BATTERY OR A BATTERY WITH A VERY LOW VOLTAGE: If a 12 Volt, Lead-Acid battery has an output voltage of less than 9 volts when it is at rest, when it is neither being charged nor supplying electrical current to an external load, there is a good chance that the battery is defective. As a frame of reference, a fully charged 12-Volt, Lead-Acid battery will have a rest-state, no-load voltage of approximately 12.9 volts. A fully discharged 12-Volt, Lead-Acid battery will have a rest-state, no-load voltage of approximately 11.4 volts. That means that a voltage change of only 1.5 volts represents the full range of charge 0% to 100% on a 12-Volt, Lead-Acid battery. Depending on the manufacturer, and the age of the battery, the specific voltages will vary by a few tenths of a volt, but the 1.5-volt range will still be a good indicator of the battery charge %.

TROUBLE SHOOTING

- 1. SOLAR PANEL IS CHARGING BUT THE GREEN LED DOES NOT ILLUMINATE IN A REASONABLE AMOUNT OF TIME:** The battery may be too large and requires more time to fully charge than originally expected, there may be another appliance drawing electric power from the battery while it is charging, or the battery may be defective. A newly purchased battery may not be fully charged and may take longer to charge initially. Also, there may be insufficient sunlight on the solar panel.
- 2. THE LED REVERTS TO ILLUMINATING AMBER AFTER TURNING GREEN.**
There may be another appliance drawing electric power from the battery causing its voltage to drop below the reset level. The battery charger then goes back into full charge mode. The charger connections at the battery may be intermittent or the battery may be defective. Also, there may be insufficient sunlight on the solar panel.
- 3. THE LED CONTINUES TO FLASH WITH ALL EQUIPMENT CONNECTED.**
Check the fuse in the cigarette adapter.

CUSTOMER SERVICE

For customer support please visit batterytender.com. You can also call our customer service hotline 877-456-7901. You may also email us Service@batterytender.com or use Chat from our website.

WARRANTY

The Battery Tender® Solar Panel comes with a five (5) limited warranty against defects or failure (within five (5) years of purchase).

THIS LIMITED WARRANTY IS VOID under the following conditions:

- 1) The product is misused, subjected to careless handling, or operated under conditions of extreme temperature, shock, or vibration beyond our recommendations for safe and effective use.
- 2) The product is misused, subjected to careless handling, or operated under conditions of extreme temperature, shock, or vibration beyond our recommendations for safe and effective use.
- 3) The product is disassembled or repaired by anyone who is not an authorized service representative.
- 4) The product was purchased from an unauthorized source. The warranty is not transferable from the original purchaser.
- 5) Any physical damage to any of components or any accessory after purchase.
- 6) Any modifications to any of the components.